

Movement of the float switch

1. The pump starts automatically when the water level rises and the float comes up to the ON water level, and stops automatically when the water level falls and the float comes down to the OFF water level. Fig. 1
2. The pump should not be installed where water is discharged directly on to the float. Fig. 2
3. The float switch should be installed where it does not come into contact with walls or any other obstructions. Fig. 3

