

No.	PARTS CODE	PARTS NAME	
1	0438067	PX-5011 400 Motor	1
2	0430284	PX-50 Head Packing	
3	0430268	PX-50 Handle	
4	0430308	Power Cord	
5	0438066	PX-50 Chain	
6	0390031	PS-40 Cord Supporter	1
7	0260018	BL-3224 Cord Band	1
8	0430280	PX-50 60Hz Impeller	1
9	0430273	PX-50 Back Liner	1
10	743605031	Bolt	4
11	0430271	PX-50 Front Cover	
12	889955125	O-ring	1
13	734505037	Socket Bolt	3
14	039000301	PS-40 Mechanical Seal	1
15	0430300	PX-50 Impeller Washer	1
16	0390025	PS-40 Impeller Adjusting Washer	2
17	0390037	PS-40 Socket Bolt	1
18	854255010	Seal Washer	1
19	0430274	PX-50 Casing	1
20	0430269	PX-50 Suction	1

No.	PARTS CODE	PARTS NAME	
21	0430270	PX-50 Strainer	
22	0430272	PX-50 NPT Delivery Flange	
23	0430283	PX-50 Delivery Packing	
24	0430290	PX-50 Stud Bolt	
25	846205008	Washer	
26	835305008	Nut	3
27	735705162	Bolt	3
28	0340142	SM Seal Ring	1
29	0340153	SM⊕Screw	1
30	0430301	PX-50 Thrust Washer	1
31	895154014	Oil Seal	1
32	0430299	PX-50 Thrust Packing	1
33	707820074	⊕ Screw	1
34	703305100	⊕ Screw	2
35	827305005	Nut	1
36	703305104	⊕ Screw	2
37	845305008	Toothed Washer	1
38	0430320	Condenser	1
39	0430441	PX-50 Impeller Bush	1
40	846505008	Washer	1



## **KOSHIN LTD.**

www.koshinpump.com

12 Kami-Hachinotsubo Kotari, Nagaokakyo City, Kyoto 617-8511 JAPAN TEL.+81-75-954-6111 FAX.+81-75-954-6119

09-01 043031005



# HIGH PERFORMANCE SUBMERSIBLE PUMP, OPERATION MANUAL

## PONSTAR

#### **PX SERIES**

Thank you for purchasing KOSHIN submersible pump. Upon receipt, please check the following:

- Model is exactly what you have ordered.
- There is no damage made during transportation.
- Accessories are all supplied.
- Please contact dealer if need further assistance.

Please read manual before operation.

## "ACCEPTABLE FOR INDOOR OR OUTDOOR USE" "SUBMERSIBLE PUMP"



Before use, please make sure to read the instruction manual. Do not operate the pump out of water or insufficient water.

## **A** WARNING **A**

Risk of electric shock. This pump is supplied with a grounding conductor and grounding-type attachment plug. To reduce risk of electrical shock, connect only to a properly grounded, grounding-type receptacle.

TO REDUCE THE RISK OF ELECTRIC SHOCK, INSTALL ONLY ON A CIRCUIT PROTECTED BY A GROUND-FAULT CIRCUIT-INTERRUPTER (GFCI).

## A NOTE A


This pump has not been investigated for use in swimming pool or marine areas. This pump has been evaluated for use with water only.

## **A** CAUTION

The pump is used a double mechanical seal. (See figure)

Consulting the following table assemble it.

Mechanical seal	Motor side (Carbon)	Plum side (Carborundum)
Outside diameter	22.5mm	20.5mm
Internal diameter	18.5mm	15.0mm

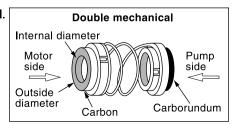


#### **SPECIFICATIONS**


Model		PX-65011	
П	Connection Dia	2" (50mm)	
PUMP	Total Head	32.8ft (10m)	
굽	Delivery Volume	68.65GPM (260L/min)	
	Voltage	Single 110V	
	Frequency	60Hz	
l K	Rated Current	6.5A	
MOTOR	Consumption of Electric Power	700W	
ı	Out put	400W	
	Revolution	3400rpm	
	Power Cord	19.7ft (6m)	
Net weight		24 Lbs. (11kg)	
Standard Accessories		16.4ft (5m) Rope	

<sup>\*</sup>Motive current sends about three times as much as rated current.


### PERFORMANCE CURVE

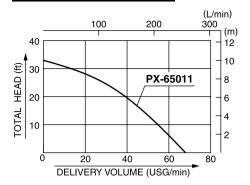

Note: Performance ratings are guaranteed minimum, not inflated maximum.

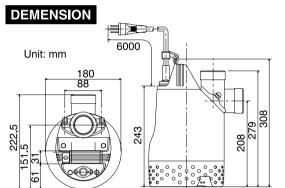

## **WIRING DIAGRAM**

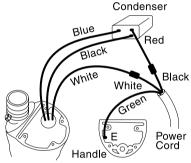

## **A** CAUTION

#### 1. Leak Current Breaker

For home use, attach a leak current breaker, GFCI (offered separately) to ensure safety.

#### 2. Connect the power source

Absolutely refrain from connecting this pump to any other power source than 110V AC, 60Hz.

#### 3. Water to use

\*Absolutely refrain from using the pump for any oil, sea water, strong alkaline or strong acidic solution, or any agricultural chemicals.

## 4. Do not run dry!

Idling can cause trouble, to prevent short cycling place pump at deepest position as possible.

## 5. Handling of power cord (cabtype cable)

- a. Never lift or move pump by power cord. Only lift by handle or tie rope supplied to handle.
- b. Select and use proper size extension cord. Do not run extension cord in water.

### 6. Using in bath, etc.

Do not enter the water when pump is being used.

## **INSTALLATION AND USE**

- An acceptable motor-control switch shall be provided at the time of installation.
- CSA enclosure 3
- Thermally protected

## **AFTER USING PUMP**

- In cold climates, do not allow pump to freeze.
   Remove pump from water to prevent damage due to freezing.
- 2. Completely drain and dry pump of water before storing.

## TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE		SOLUTION
	Not properly connected to power circuit		Correct the connection
No start at all or stops	The GFCI, leakage circuit breaker is actuated		Check the power circuit
immediately after start	The impeller is caught by foreign substance		Repair the point of leakage
	Motor is burnt	>	Repair or replace
	Voltage drop	>	Raise the voltage to the rating
Failure during	The protector is actuated		Remove foreign substance if the impeller is clogged
operation			Lower the liquid temperature if it is too high
	Voltage drop	>	Raise the voltage to the rating
	High delivery head	>	Lower the head
No pumping or poor	Discharge pipe is clogged	>	Overhauling
performance	Impeller wear	>	Replacement
	Clogging of foreign matter in strainer pump		Overhauling